

 
Instruction and Reference Guide Addendum

Features Added with Update Ver. 2.0

(For BLTA only) Utility Stitches and Character/Decorative Stitches

■ Free Motion Couching Stitch


C-01 (free motion couching stitch) has been moved from the Q category to the S category, and the pattern number has been changed to S-01.

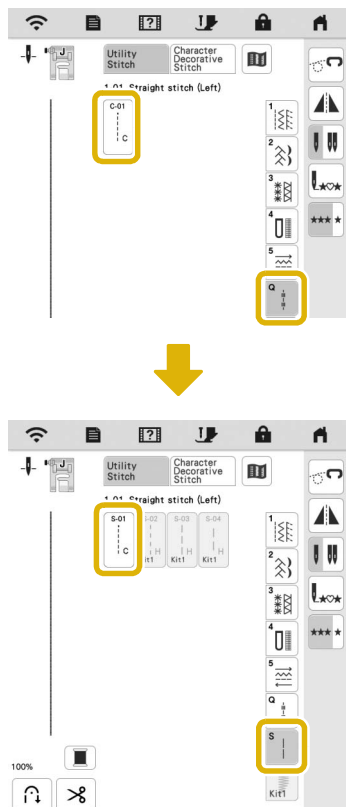

Embroidery

■ Embroidery Frame

 The optional magnetic frame can be used. For details on the magnetic frame, contact your authorized Baby Lock retailer.

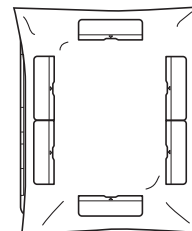

300 mm (H) × 180 mm (W) (approx. 12 inches (H) × 7 inches (W))

■ Automatically Lowering the presser Foot When Embroidering

When [Embroidery Foot Auto Down] in the machine settings screen is set to [ON], pressing the "Start/Stop" button when the presser foot is raised automatically lowers the presser foot before starting embroidering.




■ Appliqué Distance

The procedure for specifying [Embroidery Appliqué Distance] has changed.

■ Memo

 
- In earlier versions, [Embroidery Appliqué Distance] was in the Settings screen.




- 1 Refer to step ① of "Creating an Appliqué Piece" in the machine's Instruction and Reference Guide, and select a pattern.
- 2 Refer to step ⑤ of "Creating an Appliqué Piece" in the machine's Instruction and Reference Guide, and press .



- 3 Specify the distance between the pattern and the appliqué outline, and then touch .

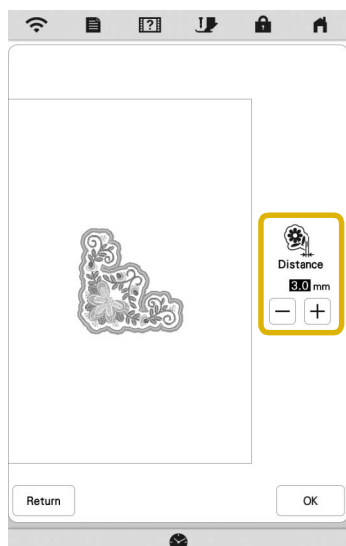

- 4 Touch .
- 5 Perform step 6 and onwards of “Creating an Appliqué Piece” in the machine’s Instruction and Reference Guide.

 
Embroidery patterns

The quality of some embroidery patterns were improved. Depending on the pattern, the number of stitches and thread colors may differ from before.

IQ Designer


Stitch type

Stitch type appears below the color bar of the line tool key.

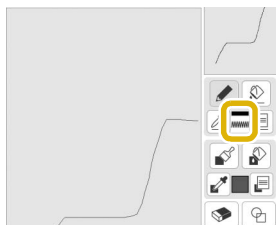

The key for decorative fill stitches

 The key for decorative fill stitches in [Region Property] have been changed.




Other Functions

 
Update Procedure Using Wireless LAN Connection

If the machine is connected to a wireless network with a strong, reliable connection, update files can be downloaded directly to the machine using this network.

For details on the wireless LAN connection, refer to “WIRELESS NETWORK CONNECTION FUNCTIONS” in the machine’s Instruction and Reference Guide.

Memo


- The machine periodically checks if there is a new update file on the server. When there is a new update file, the wireless LAN key is displayed as .





 - 1 Touch  to display [Download the update program] of the settings screen.


 
- 2 Touch .

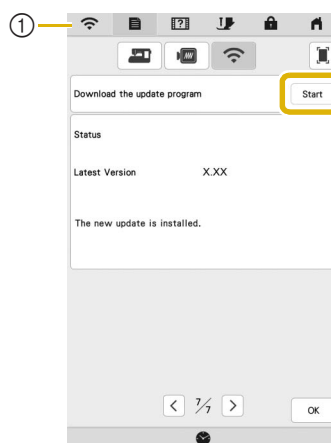
- * The machine starts to download the update file, if there is a new update file on server.
- * The number of pages on the Settings screen varies depending on the model.

 


- ① When the wireless LAN key appears as , touching  causes the machine to check if there is a new update file. If there is a new file, downloading begins.


Note


- Do not turn off the machine during the download.
- Touch  to pause the download. To restart, touch .

- 3** When downloading is finished, turn off the machine, then hold down  (Automatic threading button) while turning on the machine.

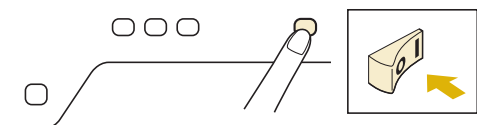

- 4** Touch .

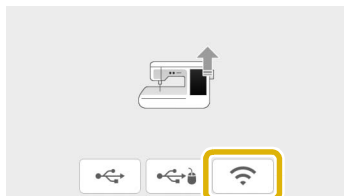 

- 5** Touch  to update the machine.

* Do not turn off the machine during the update.

 
Memo

- If there are changes or additions to functions, manuals available on the machine may be updated.

Message for Wireless LAN

The following message may appear after the machine has been turned on.

To specify WLAN settings, touch [OK], and then refer to steps **3** through **6** of “Using the Wizard to Set Up the Wireless Network Connection” in the machine’s Instruction and Reference Guide to specify the settings.

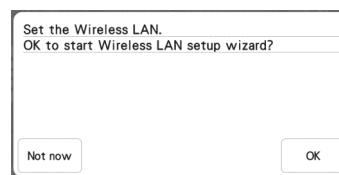

Tutorial videos

Some tutorial videos have been updated. Refer to “Playing a Tutorial Video” in the machine’s Instruction and Reference Guide.

Kit

[KIT I] has been added to the settings screen. The keys or tabs of some stitch patterns or embroidery patterns may appear in light gray and not be available. In order to activate the [KIT I], an optional Upgrade KIT must be purchased.

