



# LEARN & CREATE

with Baby Lock

## Updating Pro-Stitcher



Keep your Pro-Stitcher up to date following the simple steps that Denise demonstrates in this short video.

### Table of Contents

<b>Free Updates on Baby Lock website.....</b>	<b>1</b>
<b>Check Your Current Pro-Stitcher Version .....</b>	<b>4</b>
<b>Update Pro-Stitcher .....</b>	<b>5</b>


### Free Updates on Baby Lock website

1. You will want to check the Baby Lock website periodically and keep your Pro-Stitcher program up to date so you have access to all the most recent features
2. Go to [www.Babylock.com](http://www.Babylock.com)
3. Left click Support at the top right of the page

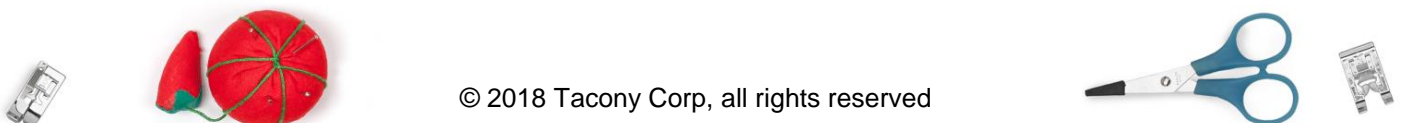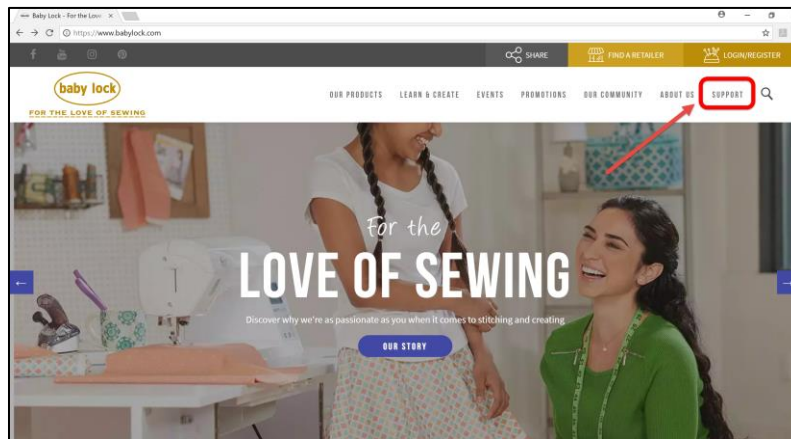




4. On the Support page, scroll down and select Software Updates

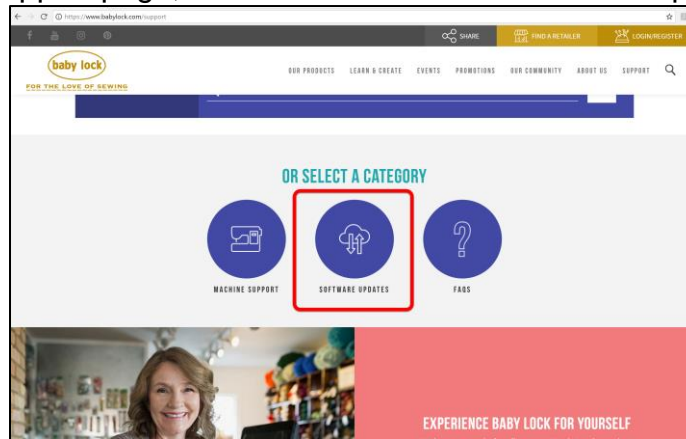

5. There are several updates for Pro-Stitcher on this page.

- Note that it is important that all updates must be installed in order

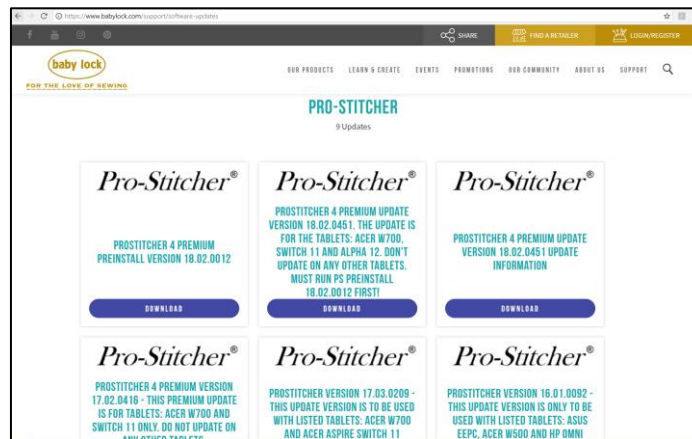


6. Place a USB flash drive in the computer

- Use a formatted flash drive with no other files on it.
- To format a flash drive, right click on the drive in the file list and select Format



7. Left click Download

8. A tab appears in the lower left corner of the computer screen showing that

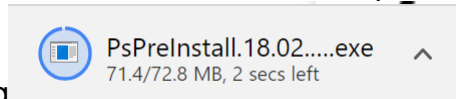


the file is downloading

9. When the file finishes downloading, you need to find where the file has been saved in your computer




10. The easiest way to do that is to left click the arrow at the right side of the

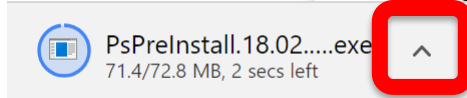


download tab

11. A menu opens of things you can do with the download and one of those is "Show in Folder"

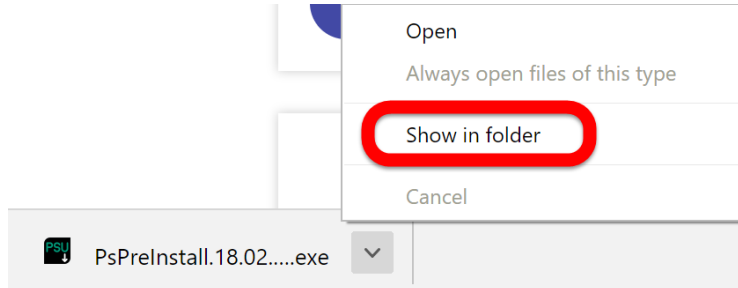


12. Left click Show in Folder and your Computer File list opens with the newly downloaded file highlighted

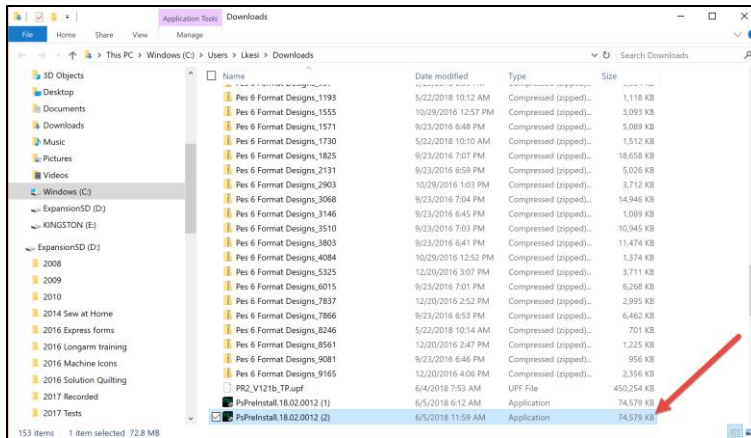


13. Click and drag to move the highlighted update file to the flash drive

14. If you left click to select the flash drive in the file list, you should see only the update file on that drive

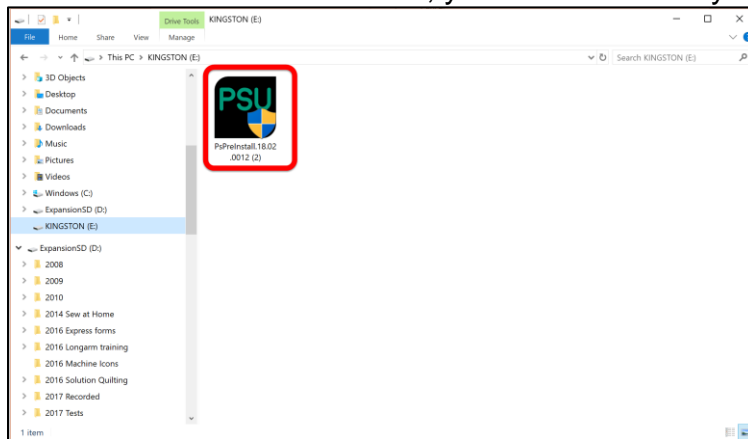

# Check Your Current Pro-Stitcher Version

1. Touch Settings

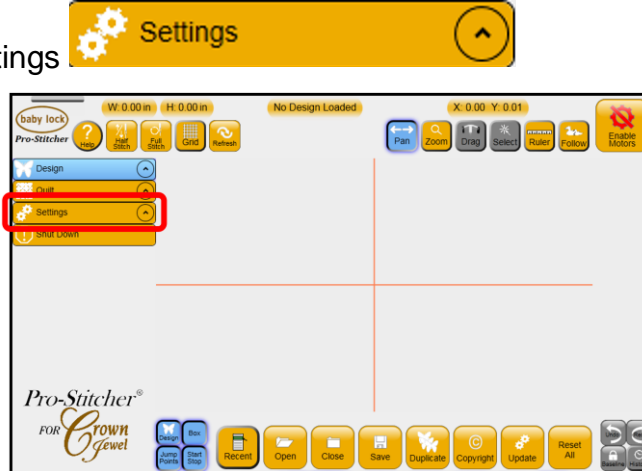


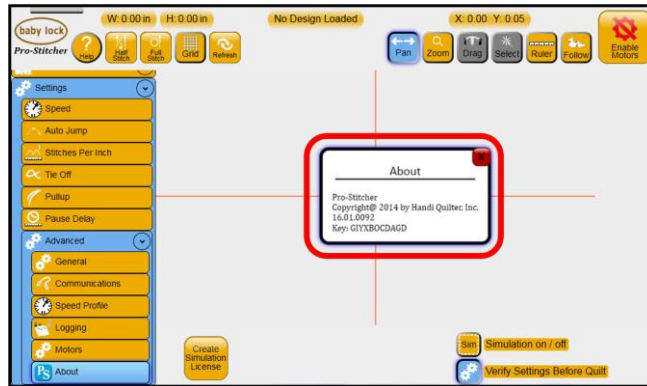
2. Touch Advanced




3. Scroll down to find About



- When you touch About  , a box is displayed in the middle of the workspace that will show you the version number for the Pro-Stitcher software currently installed




- If the version number of your Pro-Stitcher software is equal to or higher than the update, then you do not need to install that update.


- Touch the red X  in the upper right corner of the About box to close the box

## Update Pro-Stitcher

- Take the flash drive with the update to the Pro-Stitcher
- There is a USB port on the connection block for the Pro-Stitcher tablet that can be used for updates and for transferring designs to Pro-Stitcher

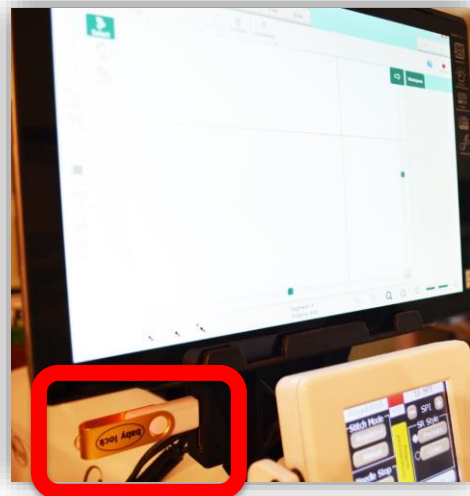


3. Touch Design

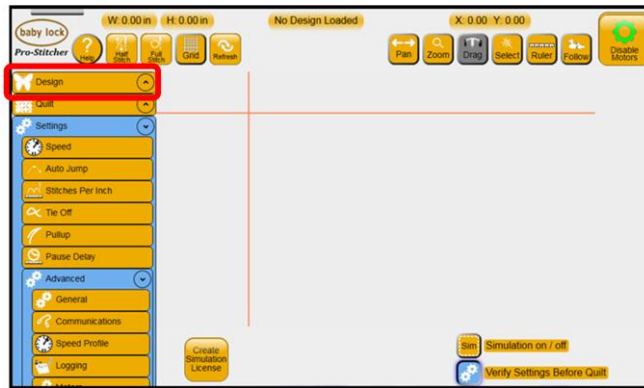

4. Touch to select File



5. Touch to select Update  at the bottom of the workspace

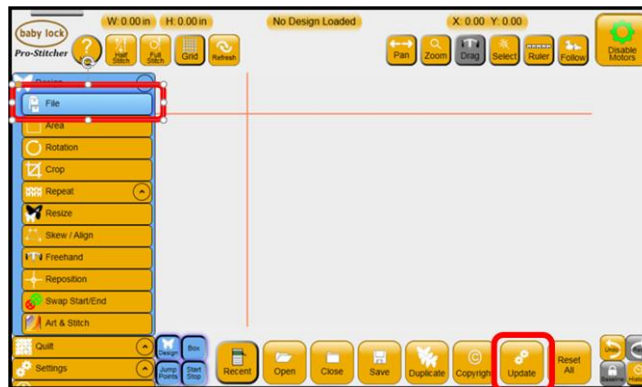

6. Touch to select the Update file and the update icon turns blue to show that it is selected

7. The name of the update file is displayed at the bottom of the workspace



8. Touch Run



9. Follow the prompts to install the update.



- Note that there is a screen that requires you to “Agree” and that if you do not touch to place a checkmark in the box to agree to the terms, the update will not be installed.

