


BABY LOCK SEWING ACCESSORIES

Blind Hem Foot

(BL66-BLH)

Instructions

The blind hem foot guides the fold of the fabric to sew a blind hem without stitches showing on the right side of fabric.

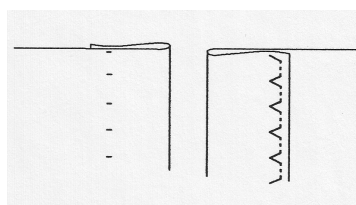


Machine Settings:


Stitch	#21 blind hem stitch
Stitch Length	2.0 mm (default)
Stitch Width	5.0 mm(default)

INSTRUCTIONS:


1. Fold the fabric as shown on drawing. Leave 5mm (approximately 3/16 inch) extended past the folded edge.

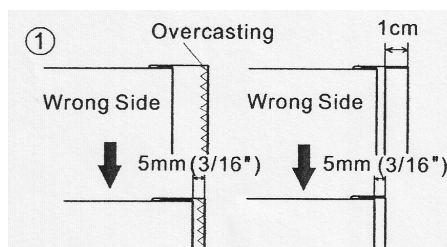

2. The guide (A) on the blind hem foot ensures even feeding of the fabric when blind hem stitching. The guide (A) is adjusted by turning the adjusting screw (B).

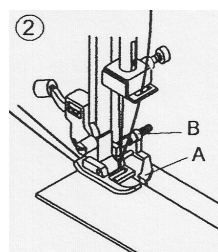


3. Place fabric so that the straight stitches are on the extended hem edge and the zig zag stitches just catch one thread of the folded edge. Turn the screw so that the guide barely touches the folded edge of fabric.

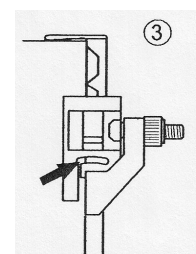

4. Lower the presser foot and sew hem, guiding fabric evenly along the guide.

5. Turn the fabric over when you have completed sewing.

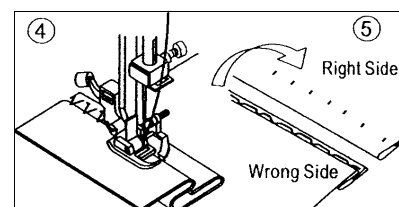

Note: If too much of the stitching shows on the right side of the fabric, change to a narrower stitch width or move the guide on the foot to the right. If the zig zag does not meet the fold, widen the stitch width or move the guide on the foot to the left.



FOR THE LOVE OF SEWING