

BABY LOCK SEWING ACCESSORIES

Adaptor Plate and Stylus Holder

(BLJ18-SA)


Instructions

A stylus is used to follow the grooves of pattern boards. When facing the machine it is attached by an adaptor plate and stylus holder to the machine's rear base plate on the right side of the machine. The machine's rear base plate has two holes pre-drilled on the right side to accommodate the adaptor plate.



Installing the Stylus Holder


The stylus holder has two threaded holes. Place the stylus holder under the adaptor plate and align the two holes with the long slot in the adaptor plate. Place the two wingbolts first through the slot and then thread into the stylus holder as shown (See Photo 2). Note that the stylus holder is mounted under the adaptor plate and that the stylus opening and thumb screw go towards the front of the machine as shown.

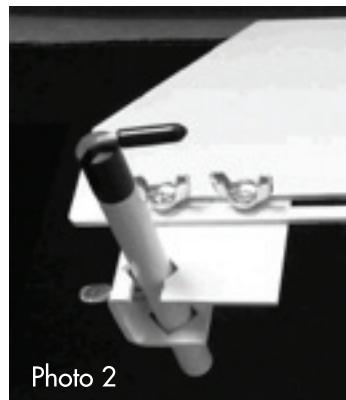

INSTRUCTIONS:

Installing the Adaptor Plate

To attach the adaptor plate, lay the machine on its left side and place the adaptor plate over the two square holes, with the rectangular hole over the wheel. Place the two carriage bolts down through the adaptor (the square holes are for locating and holding the carriage bolt head during tightening). Attach with the two lock nuts on the bottom of the machine's base plate (See Photo 1) and tighten until the bracket is firm and does not move. Lift the machine upright and place back on the carriage for the next step.

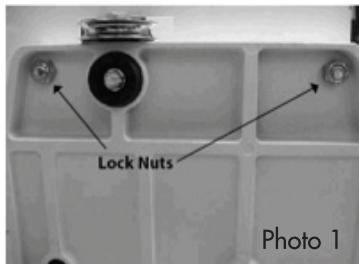

FOR THE LOVE OF SEWING