

BABY LOCK SEWING ACCESSORIES

Embroidery Foot

(BLL-EF)


Instructions

The Embroidery Foot was created as an embroidery foot replacement. If you have misplaced the foot included with your computerized Baby Lock embroidery machine, don't worry – this is the foot you need.


INSTRUCTIONS:

Note: When attaching a presser foot, always press in the operation panel. You may accidentally press the "Start/Stop" button and possibly cause injury. Be sure to use embroidery foot "U" when doing embroidery. Using another presser foot may cause the needle to strike the presser foot, causing the needle to bend or break and possibly cause injury.

1. Press the "Needle Position" button to raise the needle.

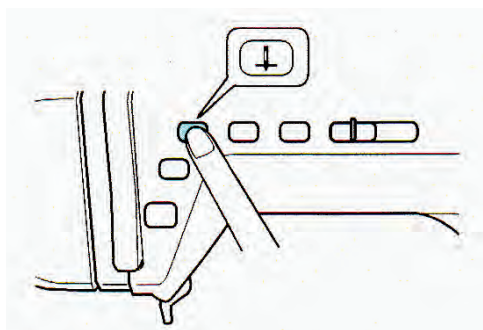

 
2. Press




The Presser foot/Needle exchange screen appears and all keys and operation buttons are locked.




3. Raise the presser foot lever.

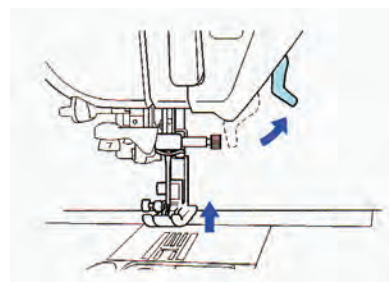

4. Press the black button on the presser foot holder to remove the presser foot.

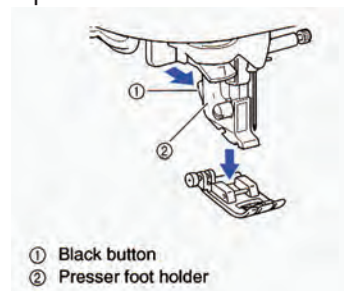


5. Use the included screwdriver to loosen the presser foot holder screw, and then remove the presser foot holder.

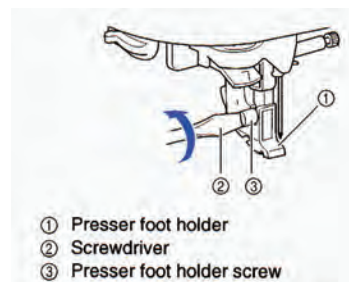


FOR THE LOVE OF SEWING

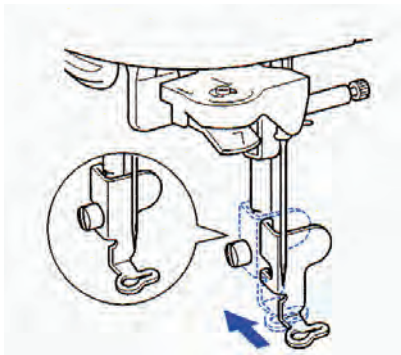

6. Attach embroidery foot "U" so that the presser foot holder screw fits into the notch in the foot.



* Make sure that embroidery foot "U" is vertical when it is installed.

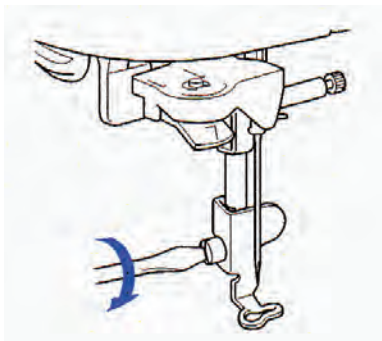7. Hold the embroidery foot in place with your right hand, and then use the included screwdriver to securely tighten the presser foot holder screw. If the screw is loose, the needle may strike the presser foot and possibly cause injury.



8. Press  , or  in the screen that appeared. All keys and operation buttons are unlocked, and the previous screen is displayed.



FOR THE LOVE OF SEWING

800-422-2952

www.babylock.com