

BABY LOCK

SASHIKO ACCESSORIES

Latch Wire

(BLQK)


Instructions

The latch wire is located in the front of the needle, which slides in the needle groove in order to open and close the eye of the needle. The latch wire plays an important role for creating the stitches. In case of skipped stitches or fabric damage, change to a new latch wire.


INSTRUCTIONS:

1. Press and hold the positioning button for approximately 2 seconds to set the machine to the loading position. (Fig. A)


REMINDER: Remove fabric and cut thread before putting machine into the loading position.

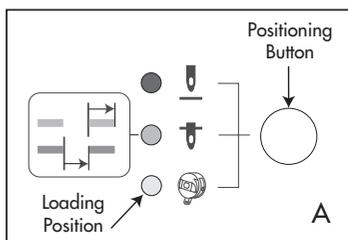


2. Lower the presser foot. (Fig. B)

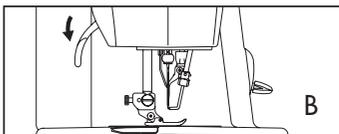


3. To move the latch wire from in front of the needle, grasp the latch wire lever and pull straight down, turn the lever 90 degrees towards you and release. Lever will remain in the down position. (Fig. C)

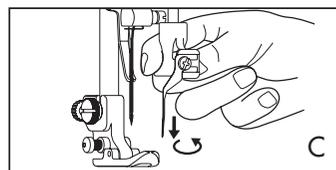


4. With screwdriver, loosen the latch wire screw by turning it counterclockwise, then slide the latch wire toward the left to remove. (Fig. D)

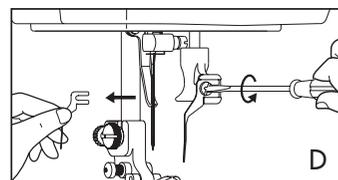


FOR THE LOVE OF SEWING

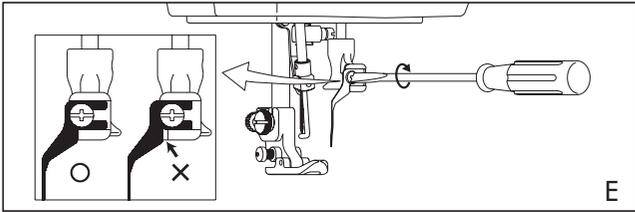

5. Slide the new latch wire onto latch wire screw until the opening is completely against the screw. Securely tighten the latch wire screw. (Fig. E)
6. Restore the latch wire to its original position. (Fig. F)

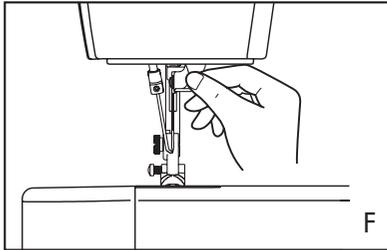

7. After restoring the latch wire, make sure it is in the center channel of needle. (Fig. G)

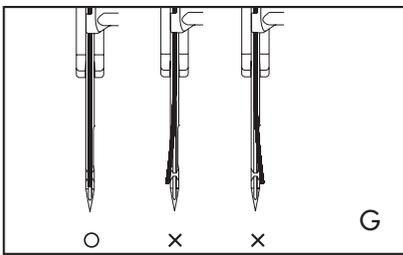

FOR THE LOVE OF SEWING

800-422-2952

www.babylock.com