

BABY LOCK SEWING ACCESSORIES

Buttonhole Foot - Sliding

(BL-BH)



Instructions

Create regular, 4-step and corded buttonholes with this sliding foot, which can be manually adjusted for the most accurate settings of your preference.

MACHINE SETTINGS:

Buttonhole


1. Pattern Selector:   
2. Presser Foot: Buttonhole foot
3. Thread Tension: 1-5
4. Stitch Length: 0.25 -1

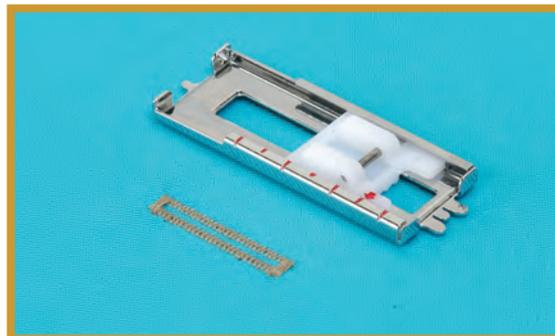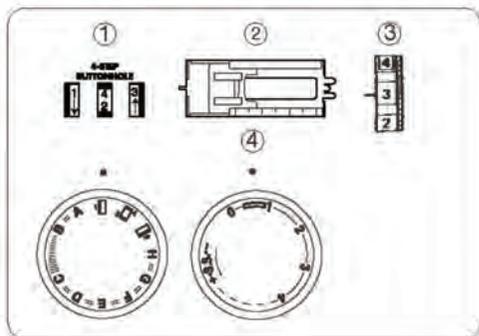

INSTRUCTIONS:

To adjust buttonhole stitch density:

Set the stitch length dial between 0.5 and 1.0 to adjust the buttonhole stitch density.

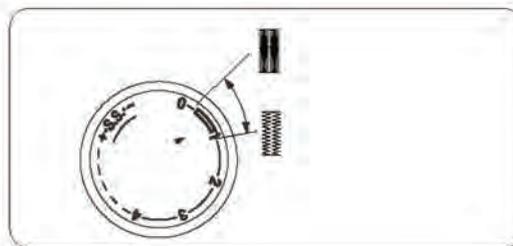

1. Carefully mark buttonhole length on fabric. Place the fabric under the foot with the buttonhole marking running toward you.
2. Move the slider (A) toward you so that the top mark (C) on the slider meets the start mark (B). Line up the markings on the foot with the top mark on the fabric.

Note: The scale on the slider is engraved in centimeters.


3. Set the pattern selector dial at "". Sew forward until you reach the front marking of your buttonhole. Stop sewing at a left stitch with the needle out of the fabric.



FOR THE LOVE OF SEWING



4. Set the pattern selector dial at "4 2". Sew 5 stitches. Stop sewing at a right stitch with the needle out of the fabric.
5. Set the pattern selector dial at "3 1". Sew until you reach the back marking of the buttonhole. Stop sewing at a right stitch with the needle out of the fabric.
6. Set the pattern selector dial at "4 2". Sew a few bartacks and raise the needle from the fabric. Set the stitch length dial to "0" and the pattern selector dial at straight sewing. Sew a few locking stitches.
7. Remove the fabric from the machine and cut the sewing thread. Insert a pin inside the bartack. Then cut the opening with a seam ripper. Take care not to cut the stitches.

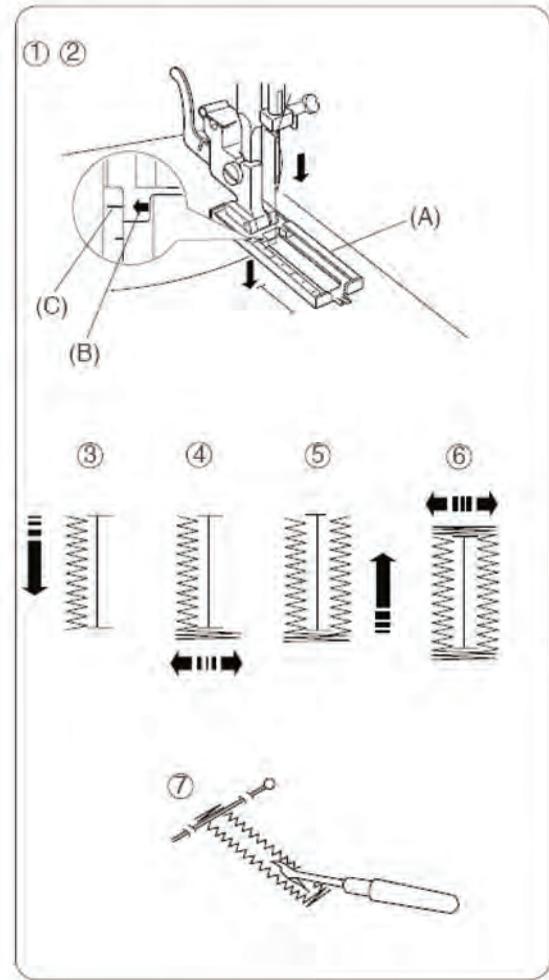

FOR THE LOVE OF SEWING

800-422-2952

www.babylock.com

