

# BABY LOCK SERGER ACCESSORIES

## Fabric Guide

(BLES8-FG)

### Instructions

If precise stitching lines are what you desire, attach the adjustable fabric guide to the table of your serger. The guide helps you align your fabric for perfect chain stitching every time.

#### MACHINE SETTINGS

 
Stitch type:	Chain Stitch or Cover Stitch
Needle:	C1, C2, C3
Cutting Blade:	Disengaged "LOCKED"
Upper Looper:	Down
Stitch width:	5.5
Stitch length:	1-4
Sewing table:	On

#### TO ATTACH TO MACHINE:


1. Thread the machine.
2. Turn the cutting blade to the "LOCKED" position.
3. Disengage the upper looper to the "DOWN" position.
4. Remove the blade cover and attach the sewing table.
5. Attach the fabric guide by securing the screws into the threaded holes in the sewing table.

#### TO ALIGN USE:


1. The raised markings on the toe of the foot indicate the needle positions to help guide your fabric for accurate stitching.
2. Align the "0" line of the fabric guide with the needle and the marking on the toe of the presser foot.
3. To use the Alignment template, drop the needle in the circle, then align the straight line with the marking lines on the toe of the foot and the "0" line on the fabric guide.

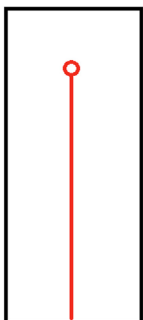

 **NOTE:** Use actual size template for alignment purposes.

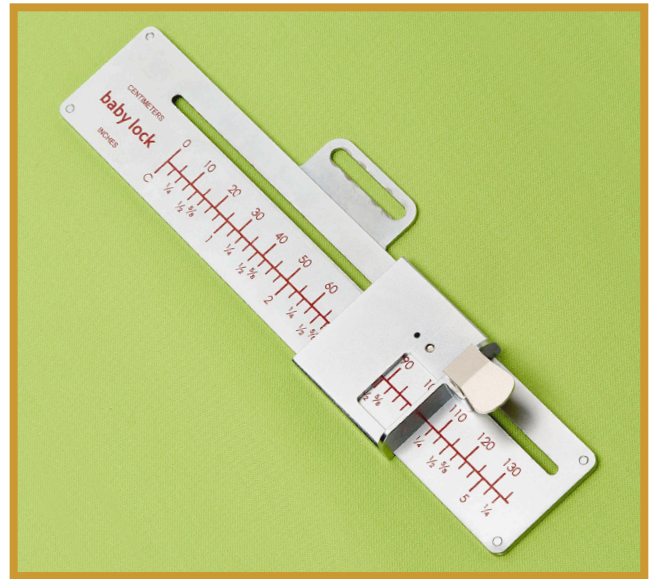

 4. The numbers on the fabric guide indicate the distance from the needle to the edge of the fabric.
5. Position the fabric guide so that the distance from the needle to the raised edge of the fabric guide is the allowance you want to sew.
6. Secure the fabric guide to the sewing table.
7. Guide the edge of your fabric against the raised edge of the fabric guide.

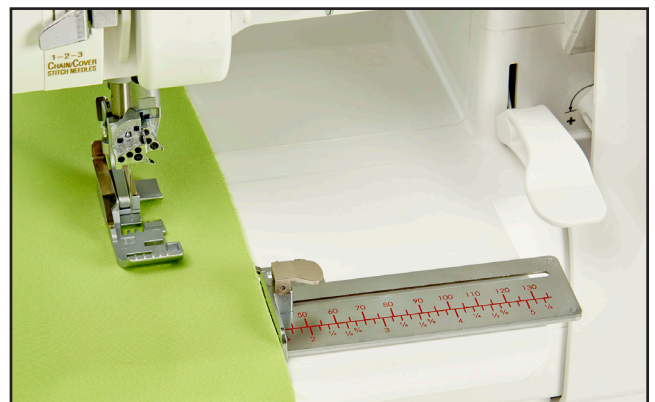

**FOR THE LOVE OF SEWING**