

BABY LOCK LONGARM ACCESSORIES

Coronet Rear Handlebars and Display

BLCT16-RH

The rear handlebars and display enable you to quilt from the back of the machine. This makes it possible to use pantographs and pattern boards for edge-to-edge quilting in conjunction with the optional Laser Light Stylus and Stylus Adaptor Plate and Stylus.

Rear Handlebars and Display Kit Contents:

1. Rear handlebars with display
2. Cable
3. 2 bolts

You Will also Need:

4mm Allen wrench (This tool came with your Baby Lock Coronet.)

Instructions

To install the optional rear handlebars and display:


IMPORTANT: Install the rear handlebars and display after the front handlebars and display have been installed.

1. Check that the machine is unplugged from the electrical outlet.



CAUTION: All power to the machine must be turned off when installing the rear handlebars. Failure to do so can result in damage to the machine.

2. The rear handlebars come mounted to a bracket. Line up the two holes in the bracket with those on the rear of the machine.
3. Slide the two bolts into holes until they stop. Hand tighten, and then use the 4mm wrench to securely fasten the handles to the back of the machine.

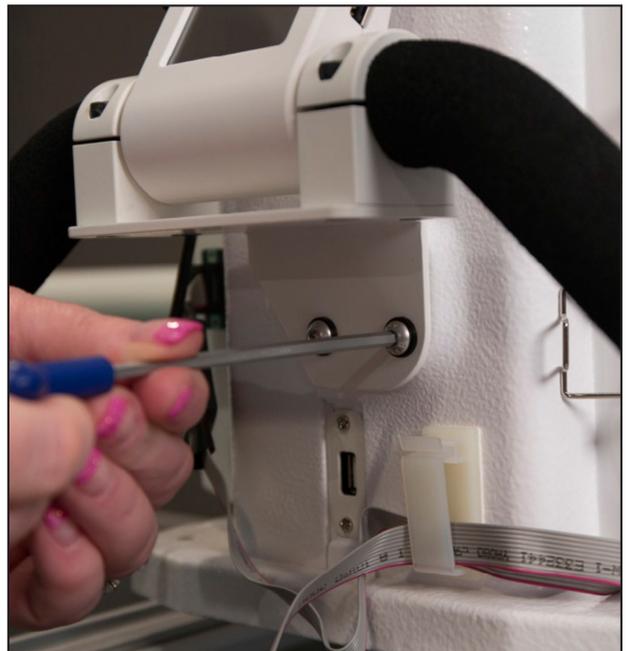

4. After the two bolts are in place, plug the small connector end of the cable into the port on the left side of the display. Push the plug securely into place.
5. Securely plug the other end of the cable into the port on the back of the machine below the handlebars.



IMPORTANT

After the rear handlebars have been completely installed and plugged in, test them by turning on the Baby Lock Coronet and looking at the rear display. If nothing appears on the screen, check that both the front and rear handlebar cables are plugged in securely, that your machine is turned on, and that the power cord is plugged into the machine as well as a power source.



FOR THE LOVE OF SEWING

www.babylock.com