
BABY LOCK SEWING ACCESSORIES

Stitch-in-the-Ditch Sole for Digital **Dual-Feed Foot**

(BLDY-SDDF)

With this foot installed on the dual feed attachment (**Fig. B**), the fabric can be smoothly fed when sewing guilt bindings or concealed seams on clothes.

Concealed seams are used for attaching belted waistbands to skirts or pants. (Fig. A) The long guide enables stable sewing.

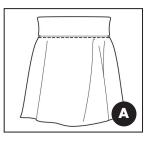


* In order to use this foot, a dual feed attachment is required. This attachment has a mechanism that feeds the top fabric while also feeding the bottom fabric. If your machine was not supplied with a dual feed attachment, it may be purchased separately as an optional accessory.

Instructions

Preparing to sew

- For details on using the dual feed attachment, refer to the instruction manual included with the machine
- 1. Attach the stitch-in-the-ditch dual feed foot to the dual feed attachment, and then attach the dual feed attachment to the machine. (Fig. B)

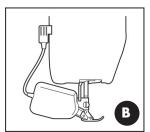




- To feed the fabric using the dual feed function, lower the feed position lever. (Fig. C)
- The rate of fabric being fed using the dual feed attachment can be changed in the settings screen. For details, refer to the instruction manual included with the machine.

Suggested stitches

In addition to the straight stitches, the following stitches can be used. (Fig. D)

 - * Select a stitch width of 7 mm (1/4 inch) or lessfor a zig-zag stitch.
- * Do not use with a stitch that uses horizontal feeding.










www.babylock.com

Presser foot marks

The marks on this presser foot can be used to check the starting point of sewing and the center of the presser foot. (**Fig. E**)

Starting point of sewing
Center of presser foot

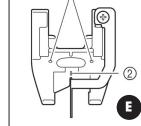

1


Attaching a quilt binding

Sewing binding tape (Fig. F)

- Stitch: Straight stitch (Center Needle position)
- Stitch length: 2.5 3 mm (3/32 1/8 inch)

Sewing the edge of binding tape (Fig. G)

- Stitch: Straight stitch
- Stitch width: 5-5.5mm (3/16 7/32 inch)

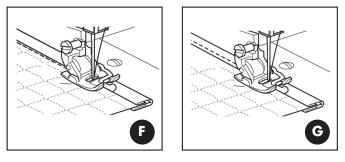

Position the front side of the fabric up, and then sew with the presser foot guide aligned with the edges of the fabric and binding tape.


Sewing concealed seams

Stitch: Straight stitch (Center Needle position)

Stitch length: 2.5 - 3 mm (3/32 - 1/8 inch)

When attaching belted waistbands to skirts or pants, sew with the presser foot guide aligned with the edge of the clothing fabric and seam of the belted waistband. Align the right side of the presser foot guide with the edge of the belted waistband. (**Fig. H**)

- 1. Waistband
- 2. Clothing fabric (skirts or pants)

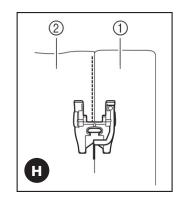



www.babylock.com