

return authorization: 800-837-3261

*please call for assistance or
please call for assistance or*

**Please note: these instructions cover both Tables & Inserts.
Please read carefully to determine
appropriate instructions for your product.*

**Note: if Table &/or Insert
is not fitting properly.*



**ACRYLIC
CABINET INSERT**



ACRYLIC TABLE

IMPORTANT:
INSTALLATION INFORMATION ENCLOSED

Sew Steady ELEVATE YOUR CREATIVITY **Acrylic Table & Insert Instructions**

HOW TO INSTALL YOUR CABINET INSERT

INCLUDED WITH INSERT:
Cling ruler

1. Remove any accessory trays surrounding free arm.
2. Raise or lower cabinet lift so free arm (at needle) is level with the top of cabinet. Insert will not fit properly if machine is too high (see examples below). Call cabinet manufacturer for instructions on micro-adjusting lift.



**EXAMPLE OF
INCORRECT HEIGHT & FIT:**
Insert is raised up on right
side resting on machine


**MACHINE TOO HIGH IN
CABINET, LIFT NEEDS
LOWERING**



**EXAMPLE OF
CORRECT HEIGHT & FIT:**
Insert sits level with
needle & cabinet

3. Sometimes the machine will need to be moved on the lift in the cabinet to allow proper insert fit. If your machine is bolted to your cabinet lift, you may need to unbolt the machine.
4. Peel white backing off cling ruler, place on underside of insert. Ruler can be cut down with scissors to fit smaller inserts.
5. Place insert around machine and lay in cabinet.

MORE INSIDE →

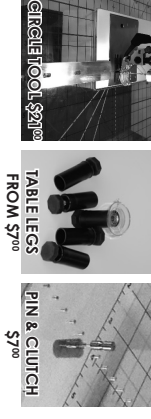

EXTRA PARTS



SMART PHONE LOUNGERS
MSRP \$10⁰⁰



ADD-A-DRAWER MSRP \$30⁰⁰



SPINNER TRAY MSRP \$15⁰⁰



POLISH KIT MSRP \$12⁵⁰



MSRP \$40⁰⁰ - \$85⁰⁰



GRID CLINGER MSRP \$25⁰⁰

AVAILABLE ACCESSORIES

HOW TO INSTALL YOUR PORTABLE TABLE

INCLUDED WITH TABLE:

Junior/Small size: 4 standard legs

Large size: 4 standard legs, 1 suction leg


Big size: 6 standard legs, 1 suction leg

Giant size: 10 standard legs, 2 suction legs, 2 cling rulers

1. Adjust leg height to be 1/4" shorter than machine free arm.
Hint: stand leg up to free arm, adjust accordingly
(for proper fit the Table will be level with the free arm of machine at the needle).
2. Install legs by placing Table upside down on a firm surface. Protect Table top with a soft towel. Push legs all the way onto black buttons attached to Table. Turn Table upright.
3. Remove any accessory trays surrounding free arm. Slide Table into place (if legs not attached or not at right height, Table may not slide into place correctly).
4. Install support/suction leg (when supplied) by attaching the suction cup into the top of the leg, adjust height and place where desired.


REMOVING LEGS (TRANSPORTATION & STORAGE):

Remove legs by placing Table upside down on a firm, protected surface and gently wiggle legs back and forth.
DO NOT TWIST LEGS!

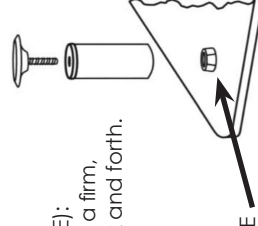

PLEASE DO NOT PICK TABLE UP BY LEGS

PLEASE DO NOT UNSCREW BUTTONS FROM TABLE

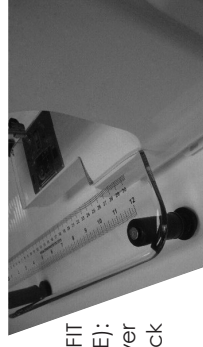

**EXAMPLE OF CORRECT FIT
(SLOPED MACHINE):**

Acrylic to right of needle may hover
over sloped machine at front or back

TABLE & INSERT DESIGN STANDARDS



SEW STEADY TABLE DESIGN STANDARDS:

All of our tables are designed based on having the accessory tray removed from the machine. We position the machine to have the front of the skinny free arm around 5"-7" from the front edge of the table. The table encompasses the entire free arm/flatted sewing surface (does not wrap to the far-right of the machine). If your machine free arm slopes downward and has contours we may choose to design the table to hover over the slope to ensure a perfectly level, smooth sewing surface. If you have a top loading bobbin and a sloped machine this may affect your use. If you are purchasing a Deluxe Table then the holes do not need to be in line with the needle to make circles.

ACRYLIC TABLE & INSERT CARE

CLEANING: Use only 100% cotton towel to clean surface of acrylic. Use a very small amount of sudsy ammonia diluted with water to clean. Other tested and proven cleaning agents are Sew Steady Polish Kit, Turtle Wax Paste and Goo Gone Gel. Similar untested products may work, but use at your own risk.

CAUTION: Do not place anything hot on acrylic. Never have sewing machine arm lower than cabinet insert. Do not stand on, lean on, or apply unnecessary pressure, outside of standard sewing use, to acrylic.

WARNING: Do not use harsh solvents such as Windex, rubbing alcohol, paint thinner, lacquer thinner, acetone, turpentine, or any petroleum based substances as they can cause acrylic to weaken and crack. If harsh solvents are used on acrylic the warranty is void.

RETURNS: Contact the original place of purchase for return policy. Product must be unused, with all components and original packaging for any return. Damaged items must be reported and have picture proof submitted within 15 business days of delivery date for no charge replacements.

Dream World Northwest warrants this product, to the original purchaser, for 1 year from purchase date to be free of defects in material and workmanship. This does not include cracks, scratches

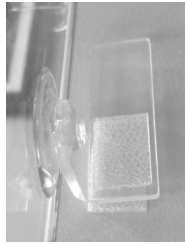


Table Lock Instructions Sold separately

1. Install suction cups with suction facing as photos above show
2. Install Table to machine (see reverse)
3. Place Table Lock on either front or back of machine – this will add extra stability as well as lock the Table in place
4. Determine if the suction will stick to your machine (some machines are textured and will not secure suction):
 - If suction secures to machine, then suction to machine, peel and stick the Velcro tab to the underside of the Table
 - If suction does not secure to machine because it is textured, then peel and stick Velcro to machine once suction is secured to Table (see Photo)
1. To remove Table Lock and Table away from the machine, simply release the suction tab from the machine and Table



SEW STEADY INSERT/INSET DESIGN STANDARDS:

All of our inserts are designed based on having the accessory tray removed from the machine. The standard is to have enough space on the right side of the cabinet opening to allow space for machine cords, to use on/off switch, and accommodate for the hand wheel to be pushed down into the cabinet. The insert is designed to be perfectly level with the free arm of the machine. If you have a top loading bobbin this may affect your use. If the machine fills the majority of the opening of your cabinet then we may have options outside of a standard full insert to help fill in those smaller gaps. If you plan to use a knee lift feature while your machine is in the cabinet, this might require custom machine placement. Contact us for details.

or dents due to dropping, bumping, banging, stepping on, or normal use. If harsh, non-approved cleaning agents are used on acrylic, warranty is void. Removing or over tightening screws and nuts from table top voids warranty. Marking on product with permanent markers may void warranty. Defective product may be sent (freight prepaid) to Service Department, Dream World Northwest, 745 Powers St. Eugene OR 97402 for evaluation of free replacement or repair at our option. Remedy does not include: cost of inconvenience, damage due to product failure, transportation damages, misuse, abuse, accidental or the like, or commercial use. In no event shall Dream World Northwest be liable for incidental or consequential damages. Some states do not allow limitation on how long an implied warranty lasts, or allow the exclusion or limitation of incidental or consequential damages, so above limitations or exclusions may not apply to you.

CALL FOR RETURN AUTHORIZATION

Phone: 800-837-3261 | 541-653-9121

Email: info@sewsteady.com

www.sewsteady.com

KEEP DATED SALES RECEIPT FOR WARRANTY

Please note: these instructions do not cover partial inserts or filler plates. If your product is not covered in these instructions, please give us a call with any questions: 800-837-3261

TROUBLE SHOOTING FIT ISSUES

Fit Issue	Possible Cause	Remedy
Not fitting around free arm	Accessory tray still attached -OR- Legs not attached or at correct height	Remove accessory tray -OR - Attach legs/adjust height (see table instructions)
Insert not sitting flush	Cabinet lift has not been lowered	Lower lift (refer to cabinet manufacturer)
Acrylic comes up over sewing machine	Sewing machine has a sloped/curved surface	This is the correct fit (example on page 2)
Table or insert still not fitting correctly		Please contact dealer where purchased