

BABY LOCK SERGER ACCESSORIES

Shirring Foot

(BLE8-SF)

Instructions

For easy shirring and gathering on lightweight to medium fabrics using the overlock or chain stitch settings on your serger.


MACHINE SETTINGS FOR OVERLOCK

Stitch type:	4-Thread Overlock, 3-Thread Overlock, Chain Stitch
Stitch Width:	M-7.5
Needle:	01 and 02
Stitch length:	4
Upper knife:	Engaged "UNLOCKED"
Differential feed:	2
Stitch selector:	A
Sewing speed:	Slow to moderate


1. The Shirring Foot has an additional groove on the underside of the foot for gathering.
2. The raised markings on the toe of the foot are seam line guides. They indicate the needle positions to help guide your fabric for accurate seaming.
3. Replace the General-Purpose Foot with the Shirring Foot. See Machine Instruction and Reference Manual for assistance in removing and replacing the snap-on feet.



4. Increase the stitch length. A stitch length of 4 is the recommended setting.
5. Increase the differential feed by moving the lever towards the number 2. The higher the differential feed the more the fabric will gather.
6. For best results place fabric to be gathered right side up under the presser foot and past the groove on the underside of the foot.
7. Place the fabric up to the needles. Turn the handwheel 3-4 turns to catch the fabric with the needles.
8. Can also be used with chain stitch.
9. The foot has tape sewing slots on the front to easily guide narrow ribbons, elastics and tapes.

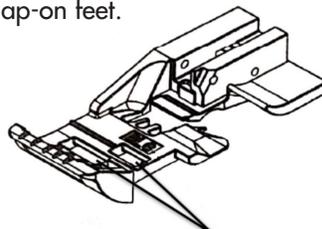

Tape Sewing Slots

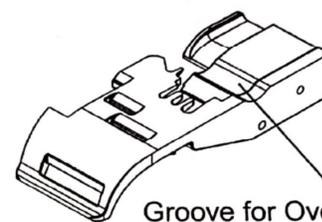

Groove for Overlock Gathering

baby lock

FOR THE LOVE OF SEWING

www.BabyLock.com

Pied pour Froncer

(BLE8-SF)

Instructions

Pour plisser et froncer aisément sur les tissus légers et moyens à l'aide du surjet ou de la chaînette de votre surjeteuse.




RÉGLAGES DE LA MACHINE


Type du point:	Surjet 4-fils, Surjet 3-fils, Point Chaînette
Largeur du point:	M-7.5
Aiguille:	01 et 02
Longueur du point:	4
Couteau supérieur:	Engagé "UNLOCKED"
Transport différentiel:	2
Sélection du point :	A
Vitesse de la couture:	Lente à modérée

1. Le pied à froncer a une rainure supplémentaire sur la face inférieure du pied pour plisser.
2. Les marques en relief sur la pointe du pied sont des guides de couture. Ils indiquent les positions de l'aiguille pour aider à guider votre tissu pour une couture précise.
3. Remplacez le pied tout usage par le pied à froncer. Consultez le Manuel d'Instructions et de Référence de la machine pour le remplacement du pied.

4. Augmenter la longueur du point. Une longueur de point de 4 est le réglage recommandé.
5. Augmentez l'alimentation différentielle en déplaçant le levier vers le chiffre 2. Plus l'alimentation différentielle est élevée, plus le tissu froncera.
6. Pour de meilleurs résultats, placez le tissu qui doit être plissé sous le pied-de-biche et au-devant de la rainure située sous le pied.
7. Placer le tissu jusqu'aux aiguilles. Tournez le volant 3-4 tours pour piquer le tissu avec les aiguilles.
8. Peut aussi être utilisé avec le point de chaînette.
9. Le pied comporte des fentes au-devant de celui-ci pour guider facilement la couture des rubans, des élastiques et des rubans étroits.

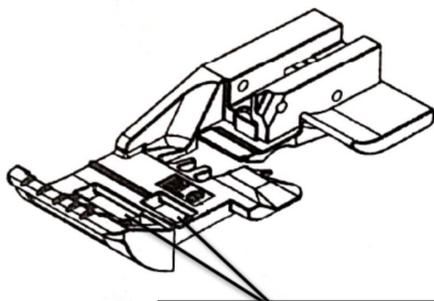

Fente pour les Coutures des rubans et élastiques

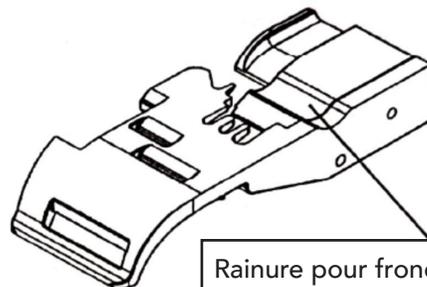

Rainure pour fronçage overlock