

Baby Lock Sewing Accessories

1/4" Sole for Digital Dual-Feed Foot*

(BLDY-QFDF)

With this foot installed on the Dual-Feed Foot, the fabric can be smoothly fed while piecing with a uniform seam allowance.

*In order to use this foot, a Digital Dual-Feed Foot is required. This foot has a mechanism that feeds the top fabric while also feeding the bottom fabric. If your machine was not supplied with a Digital Dual-Feed attachment, check with your local Baby Lock retailer. It may be purchased separately as an optional accessory.

CAUTION


- Before starting to sew, slowly turn the handwheel toward you to check that the needle does not touch the presser foot. If the needle hits the presser foot, damage or injuries may result.
- Before sewing your project, sew trial stitches on a piece of scrap fabric that is the same as that used in your project.

Instructions


Preparing to sew

For details on using the Digital Dual-Feed Foot, refer to the instruction manual included with the machine.

1. Before attaching the Dual-Feed Foot, press  to lock all keys and buttons.
2. Attach the 1/4" Sole with Guide to the Dual-Feed Foot, and then attach the Dual-Feed Foot to the machine. **(Fig. A)**

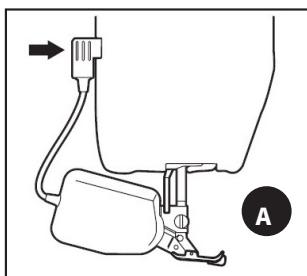


3. To feed the fabric using the dual-feed function, lower the feed position lever. **(Fig. B)**
4. The rate of fabric being fed using the Dual-Feed Foot attachment can be changed in the settings screen. For details, refer to the instruction manual included with the machine.

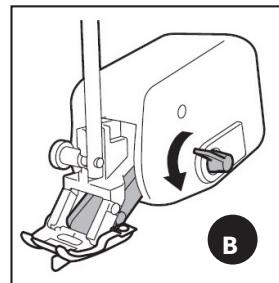

Piecing a 1/4" seam allowance

This section describes the procedure for piecing with a seam allowance of 1/4" (6.4mm) from the edge of the fabric.


Stitch: Q-01 Piecing stitch (Middle)
(Fig. C)

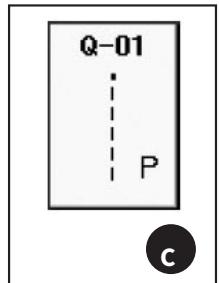


FOR THE LOVE OF SEWING

Stitch length: 1.6-2.0mm
(approx. 1/16")

Align the edge of the fabric with
the guide (Fig. D)

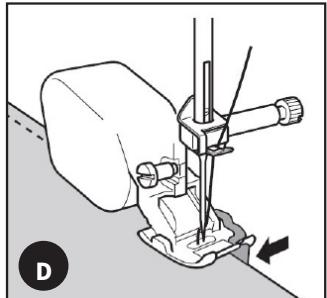


- To adjust the needle position,
select Q-02 Piecing stitch
(right) or Q-03 Piecing stitch
(left). (Fig. G)

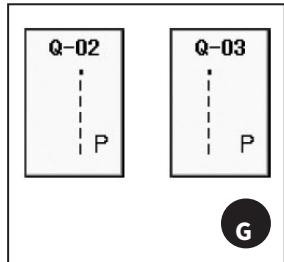

Presser foot marks

The marks on this presser foot
can be used to check the
starting point of sewing and
the center of the presser foot
as well as to stop sewing
before the edge of the
fabric. (Fig. E)

1. Starting point of sewing
2. Center of presser foot
3. 3.2mm (1/8")
4. 6.4mm (1/4")

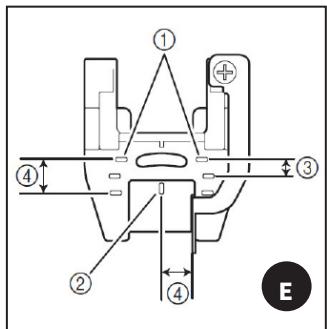


Seam allowance	Stitch width (needle position)
3.2 mm (1/8 inch)	6.75 mm
6.4 mm (1/4 inch)	3.50 mm
7 mm (approx. 9/32 inch)	3.00 mm
1 cm (approx. 3/8 inch)	0.00 mm

Specifying the seam allowance and needle position

The seam allowance can be
changed by adjusting the
needle position with the
stitch width key. (Fig. F)

1. Seam allowance

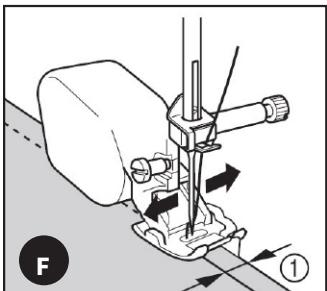

baby lock
FOR THE LOVE OF SEWING

Pied 6.4mm (1/4") à Double Alimentation Numérique*

(BLDY-QFDF)

Avec ce pied installé au Pied à Double Alimentation Numérique, le tissu peut être alimenté en douceur tout en assemblant les pièces avec une valeur de couture uniforme.

*Pour utiliser ce pied, un pied à Double Entraînement Numérique est requis. Ce pied a un mécanisme qui alimente le tissu supérieur tout en alimentant le tissu inférieur. Si votre appareil n'a pas été fourni avec un accessoire à Double Entraînement Numérique, contactez votre revendeur Baby Lock local. Il peut être acheté séparément en tant qu'accessoire en option. Il peut également être acheté séparément en tant qu'accessoire en option.

ATTENTION

- Avant de commencer à coudre, tournez lentement le volant vers vous, pour vérifier que l'aiguille ne touche pas le pied-de-biche. Si l'aiguille heurte le pied-de-biche, des dommages ou des blessures peuvent en résulter.
- Avant de coudre, faites un essai à l'aide d'une retailler du même tissu que pour votre projet.

Instructions


Préparation à la couture

Pour plus de détails sur l'utilisation du Pied à Double Entraînement Numérique, reportez-vous au mode d'emploi fourni avec la machine.



1. Before attaching the Dual-Feed Foot, press to lock all keys and buttons.
2. Attach the 1/4" Sole with Guide to the Dual-Feed Foot, and then attach the Dual-Feed Foot to the machine.


(Fig. A)

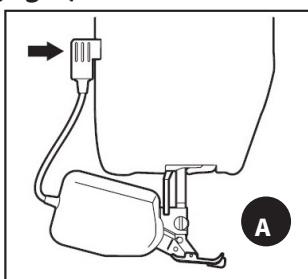

A




3. To feed the fabric using the dual-feed function, lower the feed position lever. (Fig. B)
4. The rate of fabric being fed using the Dual-Feed Foot attachment can be changed in the settings screen. For details, refer to the instruction manual included with the machine.

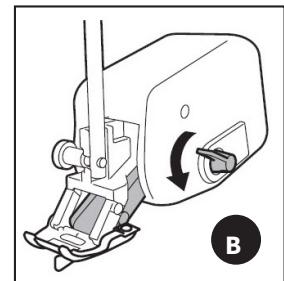

Bases Précises de Pièce à assembler d'une valeur de couture de 6.4mm (1/4")

Cette section décrit la procédure pour assembler les pièces avec une valeur de couture de 1/4 "(6.4mm) du bord du tissu.

Point: Q-01 Point pour Pièce à Assembler
(Middle) (Fig. C)

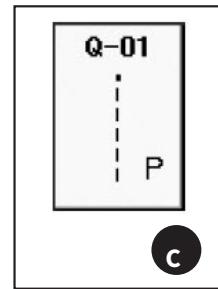


B


C

Long. du Point: 1.6-2.0mm
(approx. 1/16")

1. Alignez le bord du tissu avec le guide (Fig. D)

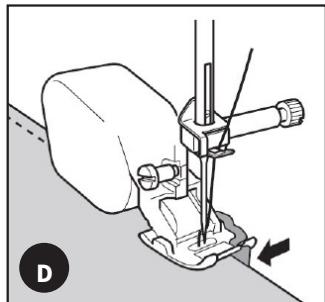


- Pour ajuster la position de l'aiguille, sélectionnez Q-02 Piecing point (à droite) ou Q-03 Piecing point (à gauche). (Fig. G)

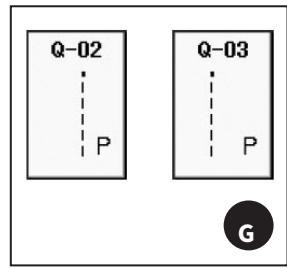

Repères du Pied-de-Biche

Les repères sur ce pied-de-biche peuvent être utilisés pour vérifier le point de départ de la couture et le centre du pied-de-biche, ainsi que pour arrêter de coudre avant la bordure du tissu. (Fig. E)

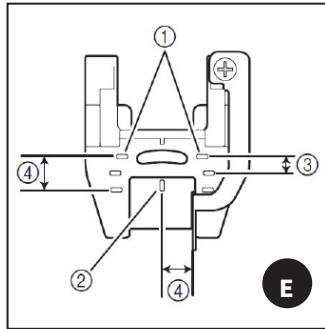

- Point de départ de la couture
- Centre du pied presseur
- 3.2mm (1/8")
- 6.4mm (1/4")

Valeur de Couture	Largeur du Point (position de l'aiguille)
3.2mm (1/8po.)	6.75mm
6.4mm (1/4po.)	3.50mm
7mm (approx. 3/8po.)	3.00mm
1cm (approx. 3/8po.)	0.00mm

Spécification de la valeur de couture et de la position d'aiguille

La valeur de couture peut être modifiée en ajustant la position de l'aiguille à l'aide de la touche largeur du point. (Fig. F)

- Valeur de couture

