



Baby Lock Ellisimo (Model BLSO) Software Update Version 4.04

February 2016

Introduction

If the software version of your Ellisimo (Model BLSO) is earlier than version 4.04, an update program is now available for download to improve its performance.

Note:




This update is available for machines with and without upgrade kits (BLSO-U, BLSO-U2, BLSO-BF2 and BLSO-U4).

When the machine is turned on for the first time after updating by this software, the machine needs more time to display the opening movie or home page screen than usual. Don't turn off the machine until the machine starts completely.

Version 4.04 update will provide the following change:

1. Improved functionality of the following feature
Running Stitch uniformity with frame pattern enlargement.

To confirm the software version of your BLSO

1. Press the power switch to turn on your machine. The LCD screen comes on.
2. Touch anywhere on the initial screen.
3. Touch  (Machine Setting Mode Key) at the bottom of the display. The Settings screen appears.
4. Switch screens by using  (Previous page key) or  (Next page key) to display the software version.





- The total number of pages on the Settings screen will vary depending on the program version in your machine.
5. If "**Version 1**" shown, is already "**4.04**" or later, it is not necessary to update your machine with the program on this page.

How to download the update program

1. Create a temporary folder (ex. C:\Temp) on your computer to save the update program file to be downloaded.
2. Download the file: xV404_taco_P.upf, to the temporary file on your computer.
3. If using a USB to update your machine, you must **FORMAT** the USB.
4. Copy the file to the formatted USB.
5. Follow the instructions in your manual for putting your machine into update mode and completed the update.

How to update your machine's software

You can use USB Flash drive or a computer to update your machine's software. Follow the procedure described in the instruction manual.

***** NOTE *****

- When using USB Flash drive to update the machine's software, you **MUST** format the USB first.
- When using a computer connection to update the machine's software, check your computer's operating system.
USB functionality is only available to be used with Microsoft Windows XP, Windows Vista, Windows 7, Windows 8/ 8.1 or Windows 10.



Ellisimo (Model BLSO) Update History

Version 4.03 update will provide the following changes:

- Fixed the situation where the machine may stop when pressing the main pedal of the multi-function foot controller without connecting the side pedal to the main foot controller.
** This optional multi-function foot controller is only available for Embroidery and Sewing Upgrade IV (Model BLSO-U4) users.*
- Fixed the situation where the machine may reboot when turning on the machine, pressing the Sewing key on the home page screen or selecting the utility stitches you saved your specific settings.
- Fixed the situation where the machine may trim the threads at the bar tack of buttonhole when sewing the pattern in the Large buttonhole patterns in the New Category of Embroidery Patterns.
** The embroidery patterns in the New Category are only available for Embroidery and Sewing Upgrade IV (Model BLSO-U4 (Sold separately)) users.*
- Improved On Screen Designer Function.
 - Increased the maximum memory capacity to create or edit the embroidery design on the On Screen Designer function.
 - Added the storage capacity indicator on the edit screen of On Screen Designer.



- * It has been applied to the feature activated by the Embroidery and Sewing Upgrade II (BLSO-U2 (Sold separately))*
- Improved the performance for displaying the image on the LCD.
- Improved the quality of reinforcement stitches when embroidering.

Version 3.20 update provided the following changes:


- The following optional embroidery frame can be used on the machine.
** Embroidery Hoop and Grid (6" X 6") [Model number: BLMA-150]*
- Corrected the misspellings of the item in the machine settings. (English)
- Corrected the misspellings of some thread color names. (English)

Version 3.10 update provided the following changes:

- Improved procedures for connecting embroidery patterns using camera function.
** This feature is only available for Embroidery Upgrade III (BLSO-BF2 (Sold separately)) users.*
Note:
The operation manual for the BLSO-BF2 has been revised to show the improved procedure.



- Updated Stitch Recalculator function in all patterns.
** This feature is only available for Embroidery and Sewing Upgrade I (BLSO-U (Sold separately)) users.*
- The frame sizes in the "Embroidery Frame Display" can be displayed in inches when selecting "inch" as the display units.

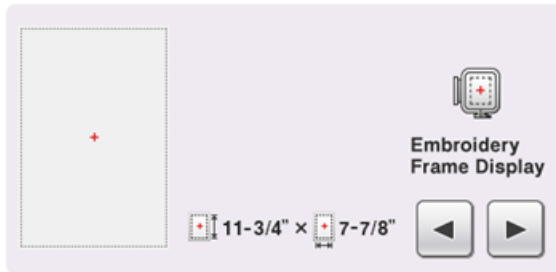

- Revised the wording of messages.

Version 3.01 update provided the following changes:

- Fixed the situation where the color shuffling function may not work correctly.
** It has been applied to the feature activated by the Embroidery and Sewing Upgrade II (BLSO-U2 (Sold separately))*
- Fixed the situation where connected patterns by using the camera function may not be embroidered correctly.
** It has been applied to the feature activated by the Embroidery Upgrade III (BLSO-BF2 (Sold separately))*

Version 3.00 update provided the following changes:

- Settings screen
New Settings pages/ keys for the upgrade kits (Sold separately) have been added to the Settings screen. New keys for new feature are activated when the Upgrade Kit is purchased and Certification has been completed on machine.
- Improved the accuracy of indicating the needle drop position mark in the screen.
- Fixed the situation where the machine may reboot when loading an incorrect .phc file.

Version 2.01 update provided the following changes:

- Improved camera recognition for improved detection of the embroidering position sticker.

Version 2.00 update provided the following changes:

- Fixed the situation where the machine may quit counting the number of embroidered stitches on the LCD screen and moving the [+] cursor over a pattern on the LCD screen during embroidering.



- Revised the wordings of error messages.
- In the Embroidery Edit screen, the pattern can be magnified by 200% within the embroidery display area.
- The thumbnails for selecting an embroidery pattern can be set to be displayed at the normal size or a larger size. (The larger size is 1.5 times the normal size.)
- An image of the needle position being displayed by the built-in camera or an image of the Settings screen can be saved in the BMP format on USB media.
- A grid can be displayed to check the needle position in the LCD. This enables easy alignment of the needle position.
- If an area is not selected while using the built-in camera to align the embroidering position, scanning will start from the center.
- The image of the needle position displayed by the built-in camera can be magnified by 200%.
- The parameters in the Settings screens can also be displayed in a language other than English.
- When combining character patterns, the stitching connecting patterns (jump stitches) are no longer displayed in the preview so that the patterns can be viewed more clearly.
- If twin needle sewing has been selected, the stitching is displayed in the preview as two rows of stitching.
- When pressing the keys for advancing/ returning to a page, for example, in the pattern selection screen, the pages are scrolled through continuously (from the last page directly to the first page or from the first page directly to the last page).
- Additional characters (Í, í) have been added to several of the alphabet font patterns. (Embroidery/Embroidery Edit/ Character Decorative Stitch)
- Revised some thumbnails for satin stitch patterns on the pattern selection screen.

Version 1.12 update provided the following changes:

- The foot control communication with machine was improved.

Version 1.11 update provided the following changes:

- Improved quality of tie off during embroidering.
- Fixed the situation where some embroidery characters cannot be enlarged correctly.
- Added character “ / ” to Exclusive Script.

Version 1.10 update provided the following changes:

- In the Embroidery screen and Embroidery Edit screen, the mouse wheel can be used to resize patterns proportionally or to rotate patterns.
- One Cyrillic font was added to the Character Decorative Stitch screen and two Cyrillic fonts were added to the Embroidery screen and Embroidery Edit screen.